



QUALITY... PLAIN & SIMPLE®

## Stainless Steel Kickdown Bracket & Stainless Springs Installation Instructions

### General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels. Do not attempt to install this product while the engine is running.

The Lokar Stainless Steel Kickdown Bracket and Stainless Springs kit is designed to be used with a Lokar Kickdown Cable.

Refer to Fig. 1 for the component names.

**Step 1:** Remove the carburetor base mounting bolt or nut from the left rear corner of the carburetor, and position the Lokar Kickdown Bracket as shown in Fig. 2. Install the carburetor base mounting bolt or nut only finger-tight.

**Step 2:** Position the Lokar Kickdown Bracket so that the bend that is labeled in Fig. 2 is parallel to the carburetor base front to back.

**Step 3:** Using the included 5/64" Allen wrench, tighten the set screw until it touches the carburetor base. Then, lock the set screw in place with the jam nut.

**Step 4:** Tighten the carburetor base mounting bolt or nut.

**Step 5:** Install the tear drop between the kickdown hex carb fitting (not included) and the carburetor throttle arm. Secure with a nylock nut (not included). Leave the nylock nut just loose enough so that the tear drop can pivot freely. Connect the springs to the small hole in the Lokar Kickdown Bracket and to the tear drop.

Proceed with the installation of the kickdown cable. If you are using a Lokar Kickdown Kit, you may discard the Kickdown Mounting Bracket that comes with the Kickdown Kit. The kickdown cable adjuster from the Kickdown Kit will be installed in the larger hole, beside the small hole that the stainless springs are connected to.

# Stainless Steel Kickdown Bracket & Stainless Springs Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

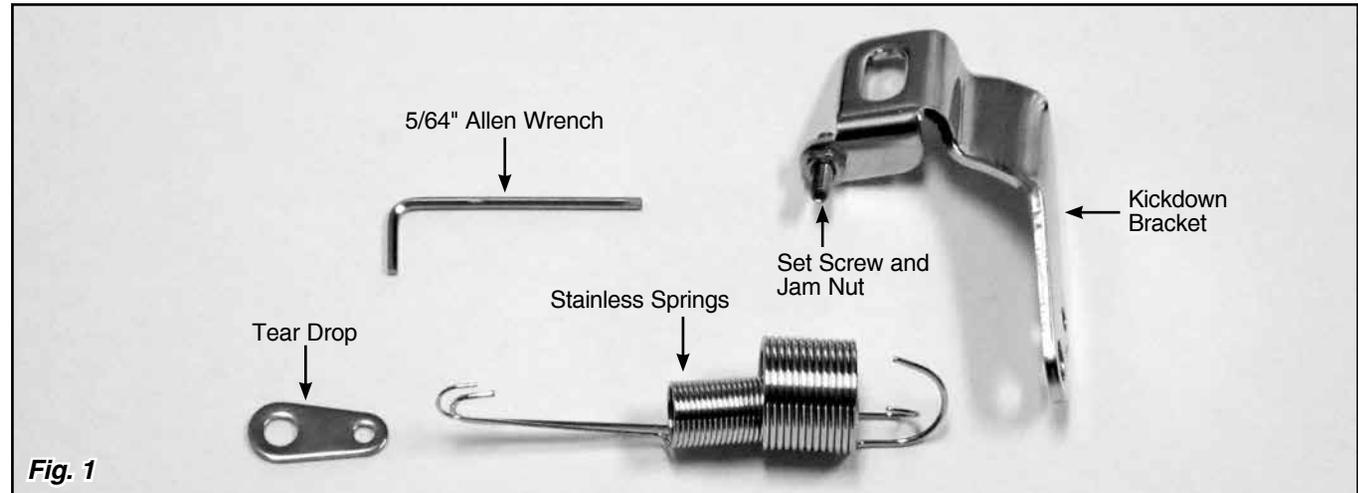


Fig. 1

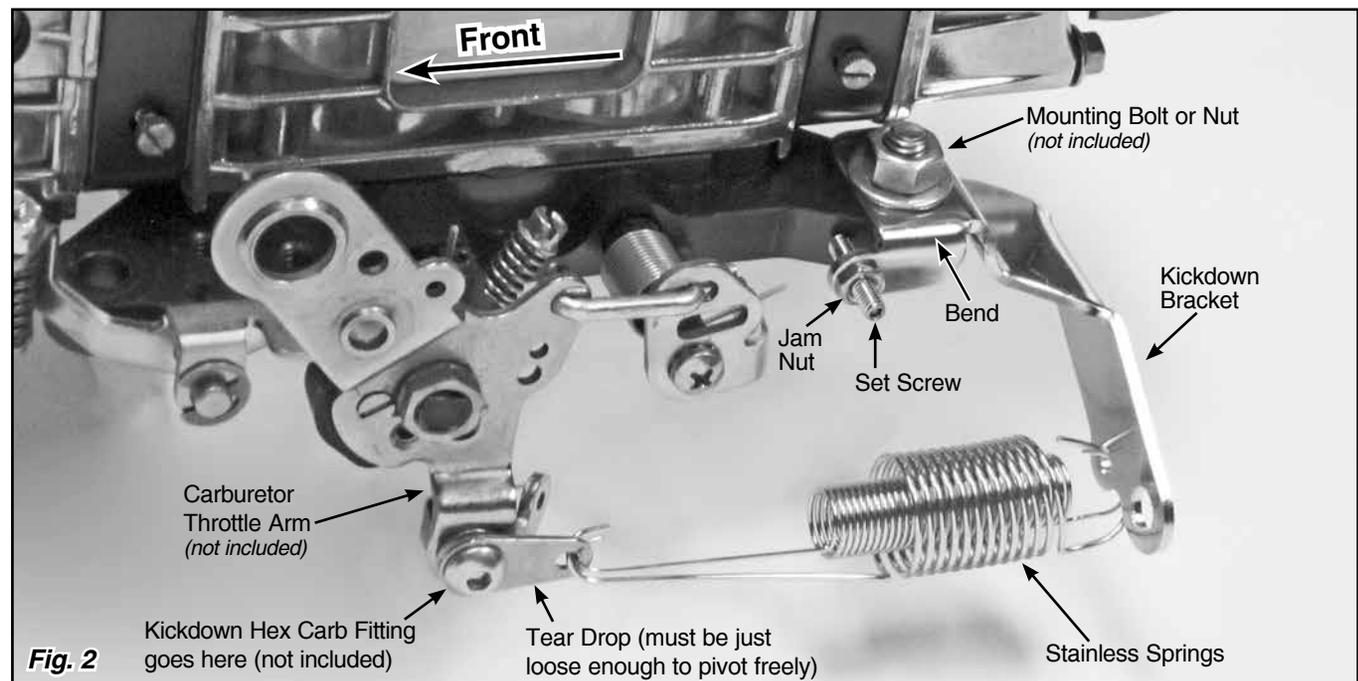


Fig. 2