

## Oil Fill Valley Plate Baffle Installation Instructions

### General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

**All Lokar Installation Instructions can be found by visiting [www.lokar.com/instructions.html](http://www.lokar.com/instructions.html).**

**Refer to Fig. 1 for the component names.**

**Step 1:** Remove existing breather cap, if applicable.

**Step 2:** Lubricate all three O-rings on the baffle with a light coat of clean motor oil.


**Step 3:** Push the baffle fully into the oil fill tube. The upper O-ring will still be visible above the oil fill tube. **Fig. 2**

**Step 4:** We recommend trimming 1/8" - 1/4" off each leg of the retaining spring on your breather cap (not included) to prevent them from hitting each other in the smaller diameter of the baffle. **Fig. 3**


**Step 5:** Install the breather cap. **Fig. 4**



**Fig. 1**

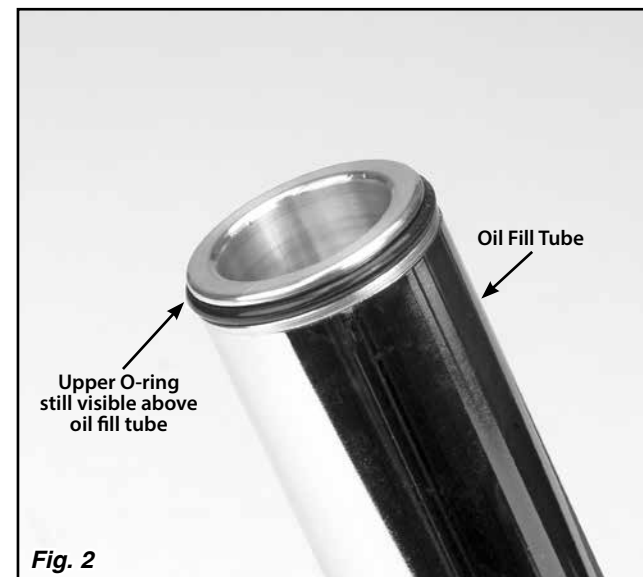

**Fig. 2**

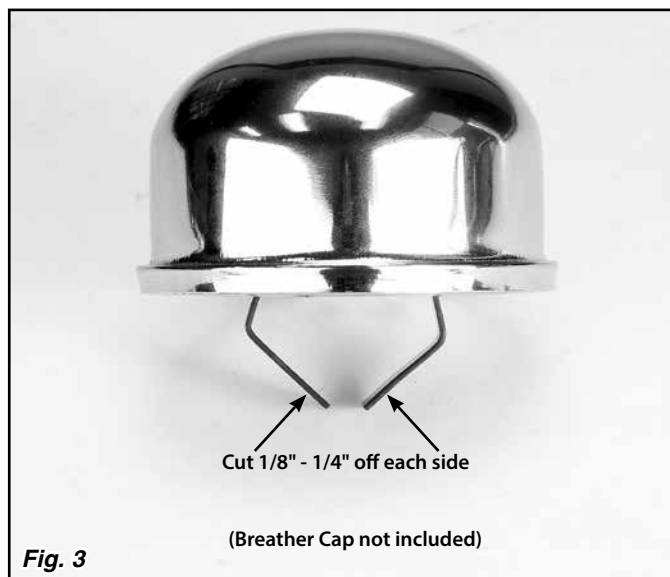

**Fig. 3**



**Fig. 4**