



QUALITY... PLAIN & SIMPLE®

Ram Jet 350 Throttle Cable Bracket Installation Instructions

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

Make sure the engine, transmission, body and frame are properly grounded. We recommend using anti-seize lubricant on all aluminum threads.

Refer to Fig. 1 for the component names.

The Lokar Throttle Cable Bracket is designed to be used with a Lokar Throttle Cable and (if applicable) a Lokar Kickdown Cable and Lokar Cruise Control Cable.

Step 1: Disconnect the throttle cable and (if applicable) the kickdown cable and cruise control cable from the throttle body pulley. Remove the cable(s) from the original throttle cable bracket, and then remove the original throttle cable bracket.

Step 2: Install the new Lokar Throttle Cable Bracket in the same location as the original, using your original hardware, as shown in Fig. 2.

Step 3: If you are not using a kickdown cable or a cruise control cable, you will not need the new kickdown bracket, and you can proceed to **Step 4** now. If you are using a Kickdown Cable and/or a Cruise Control Cable, install the kickdown bracket onto the throttle body pulley as shown in Fig. 2. The kickdown stud and 1/4"-28 nylock nut will go in the bottom hole, and the 1/4"-28 x 1/2" button head bolt goes in the top hole.

Step 4: Install the Throttle Cable into the Throttle Cable Bracket, using the lower hole that is closest to the intake manifold. Connect the Throttle Cable to the throttle body pulley and adjust as described in the Throttle Cable Installation Instructions.

If you are using a Kickdown Cable, install it into the top hole in the Throttle Cable Bracket. Connect it to the kickdown stud on the throttle body pulley. Adjust the Kickdown Cable as described in the Kickdown Cable Installation Instructions.

Ram Jet 350 Throttle Cable Bracket Installation Instructions

Building American Quality... With A Lifetime Warranty!®



TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

Step 4 (Continued) If you are using a Cruise Control Cable, install it into the outer hole on the bottom of the Throttle Cable Bracket, beside the Throttle Cable. Connect it to the original cruise control stud on the throttle body pulley. Adjust the Cruise Control Cable as described in the Cruise Control Cable Installation Instructions.

Fig. 2 shows a completed installation with a Kickdown Cable and a Cruise Control Cable.

NOTE: Check to make sure there is no binding in any of the Cables before starting the engine or driving the vehicle.

Fig. 1

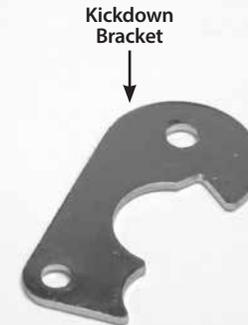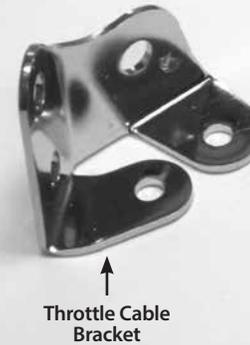

1/4"-28 x 1/2" Button Head Bolt with Nylock Nut



Kickdown Stud with 1/4"-28 Nylock Nut

Fig. 2

