


Billet Aluminum Arm Rest Door Pull Cutting Template

General Installation Notes:

Please read the instructions completely before beginning the installation. If you have any questions please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

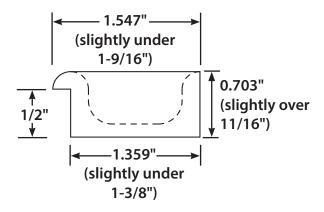


Billet Aluminum Arm Rest Door Pull Cutting Template

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

Crescent Oval Arm Rest Door Pull

<u>NOTE:</u> Before cutting out the template, double check the length and width measurements below to make sure they match the dimensions listed.

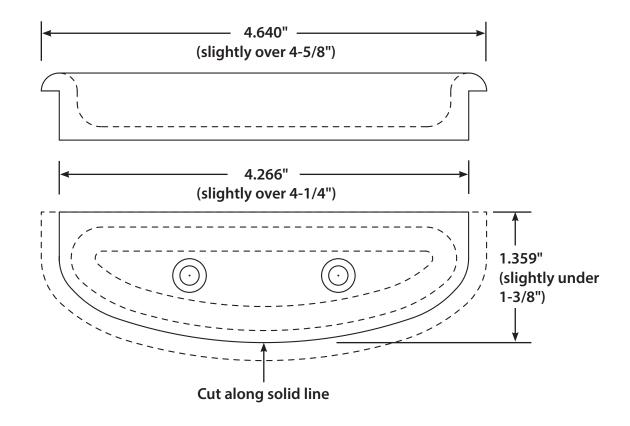

Oval Arm Rest Door Pull

NOTE: Before cutting out the template, double check the length and width measurements below to make sure they match the dimensions listed.

