

Billet Grab Handle Installation Instructions

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.


We recommend using anti-seize lubricant on all aluminum threads.

Refer to Fig. 1 for the component names.

Step 1: Use a 3/16" Allen wrench to loosen the 1/4"-20 x 3/4" socket head bolts.

The Billet Grab Handle can be assembled at three different angles, as shown in *Fig. 2.* If you are changing the angle of the lever, remove both socket head bolts completely. Loosely reassemble with the lever in the position that you want.

Step 2: With both bolts loose, spread the clamps apart, and position the Grab Handle where you want it on the roll cage. Tighten the bolts using a 3/16" Allen wrench. Fig. 3

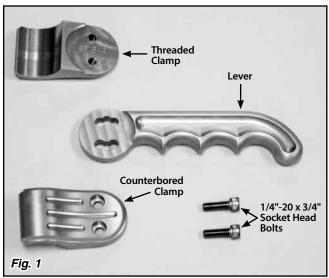

Billet Grab Handle Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com









