Coyote Drive-By-Wire Pedal Pad Installation Instructions

Building American Quality… With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

QUALITY... PLAIN & SIMPLE®

Coyote Drive-By-Wire Pedal Pad Installation Instructions

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions, please call.

Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels.

All Lokar Installation Instructions can be found by visiting www.lokar.com/instructions.html.

Refer to Fig. 1 for the component names.

Step 1: Using a T25 Torx bit, socket, or driver, remove the original bolt from the pedal arm behind the original pedal pad. ***Fig. 2***

Step 2: Tilt the top of the original pedal pad away from the pedal arm, and slide the pedal pad downwards to remove the pedal pad from the pedal arm.

Step 3: The back side of the new pedal pad has a pocket at the bottom end. Position the new pedal pad on the pedal arm with the pocket at the bottom of the pedal pad and the top end of the new pedal pad tilted away from the pedal arm.

Step 4: Slide the pedal pad upwards so the end of the pedal arm fits into the pocket at the bottom of the pedal pad. Rotate the top of the pedal pad so it is against the pedal arm.

Step 5: While holding the top of the pedal pad against the arm, insert the tee nut into the T25 bolt hole in the pedal arm behind the pedal pad. ***Fig. 3***

Step 6: Apply a small amount of blue thread locking compound to the 1/4"-20 x 1" flat head bolt. Hold the tee nut in the bolt hole and insert the bolt through the hole in the center of the pedal pad. Thread the bolt into the tee nut, and tighten using a 5/32" Allen wrench. ***Fig. 4***

Step 7: Attach the rubber insert to the pedal pad using the supplied adhesive. ***Fig. 5*** shows a completed installation.

Note: Read the adhesive manufacturer's instructions for proper application. If excess adhesive gets on the aluminum pedal pad, clean it off with acetone before it dries. Apply a small amount of adhesive to the bottom of the recess in the aluminum pedal pad only. Install the rubber insert into the aluminum pedal pad, and apply pressure to the rubber insert for 60 seconds.

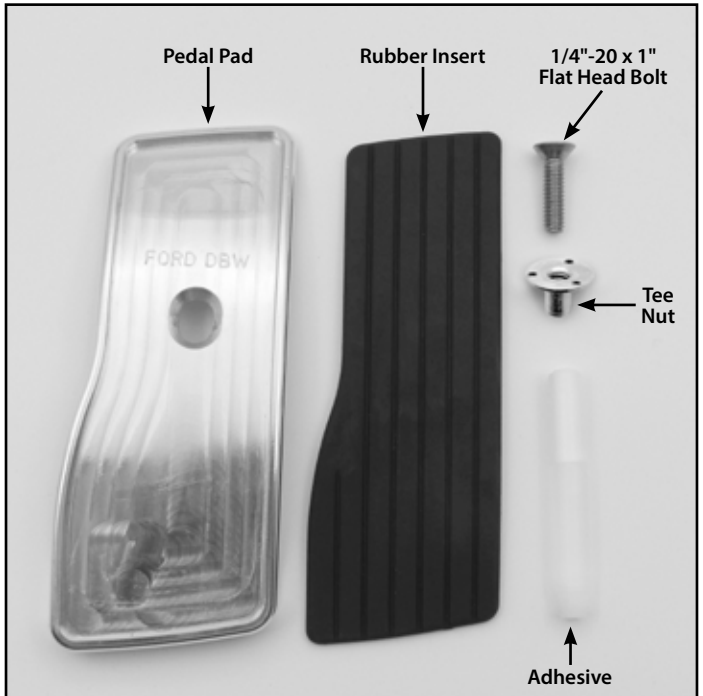


Fig. 1

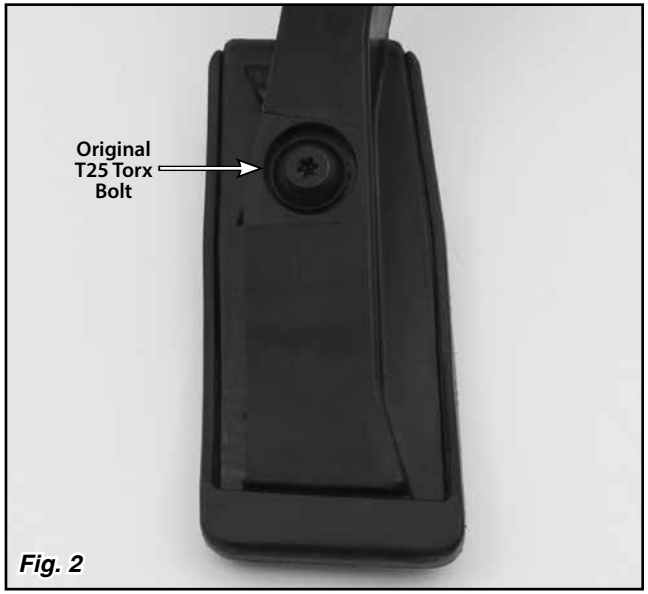


Fig. 2

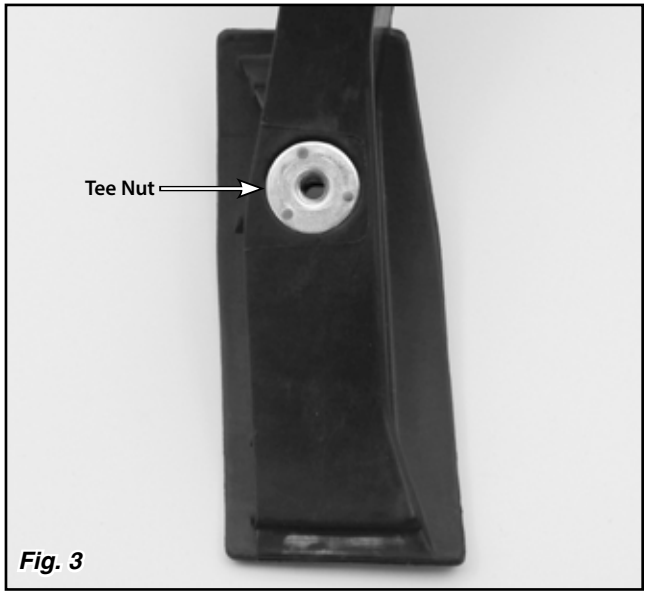


Fig. 3

Hazards Identification: Irritant. Irritating to eyes, skin, and respiratory system. Cyanoacrylate. Danger. Bonds skin and eyes in seconds.

Ingredients: Ethyl Cyanoacrylate

Symptoms of Exposure: Vapor irritating to eyes and breathing. Prolonged exposure may lead to non-allergic asthma.

First Aid Measures: **Ingestion:** Ingestion not likely due to polymerization.
Inhalation: Remove to fresh air. If symptoms continue, seek medical advice.
Skin Contact: Soak in warm soapy water.
Eye Contact: Flush with water, seek medical attention.

KEEP OUT OF REACH OF CHILDREN

Additional Product Safety and Health Information Source: Material Safety Data Sheet (MSDS RP, SI, FS, HT, & MG Series Cyanoacrylate Adhesive) or 1-800-255-3924

© 2026 Lokar, Inc.

INS0285 Rev. 09/24/2026



Fig. 4



Fig. 5

© 2025 Lokar, Inc.